

**STAR  
WARS**™



**KROSS**   
**STUDIO**

**DEATH STAR™ ULTIMATE COLLECTOR SET  
USER MANUAL**

# TABLE OF CONTENTS

## CONTAINER

Opening the kyber crystal container 3

Control panel 4

Storage units 5

## CAPSULES

Opening the capsules 6

## DEATH STAR TOURBILLON

Overview 7

Movement winding 9

Time setting 10

Interchangeable straps 11

Buckle opening 12

Buckle release 13

Regular care 14

Tech specs 15

# OPENING THE KYBER CRYSTAL CONTAINER

The container is made of wood, aluminium and black polymer, carefully selected for their technical properties and resistance.

This container weighs approximately 80 kg. Should you lift it, we recommend to use extreme caution and be at least 2 people.

Before opening the container, use the provided gloves. Open the container flaps one by one, starting with the front flap (1) then the back flap (2).


The three capsules located on the front row are removable.

On the top and back rows, the capsules are not removable. You may remove the top cover and use the tubes inside the container as free storage.

## INDICATIONS

- 1 Front Flap
- 2 Back Flap
- 3 Control Panel
- 4 Manifest Panel

A functioning electronic control panel (3), composed of LED rows, is located on the top of the front flap (1). A

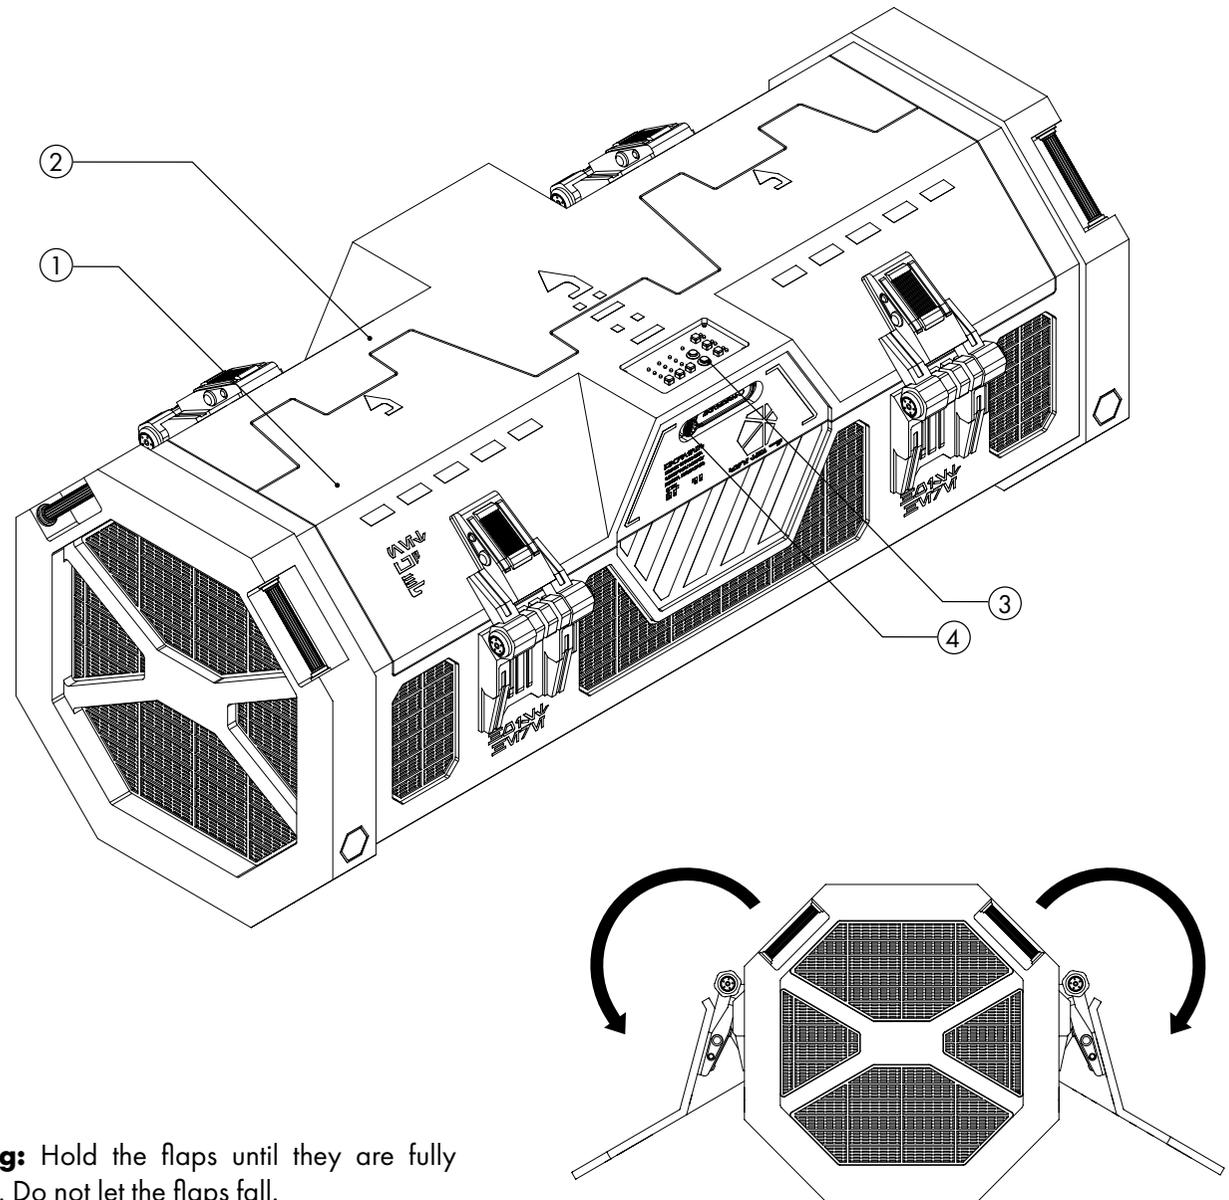

**Warning:** Hold the flaps until they are fully unfolded. Do not let the flaps fall.


# CONTROL PANEL

manifest panel (4) is located below. Both are controlled by switch buttons.

The control panel runs on one 9V battery - not included - located on the inner side of the front flap (1). The LED main switch button (A) must be turned on before turning the LED lights on.



## INDICATIONS

- 3** Control Panel
- 4** Manifest Panel
- A** Main switch button
- B** Main switch I/O LED
- C** Manifest panel I/O button
- D-I** Switch buttons for orange LED rows

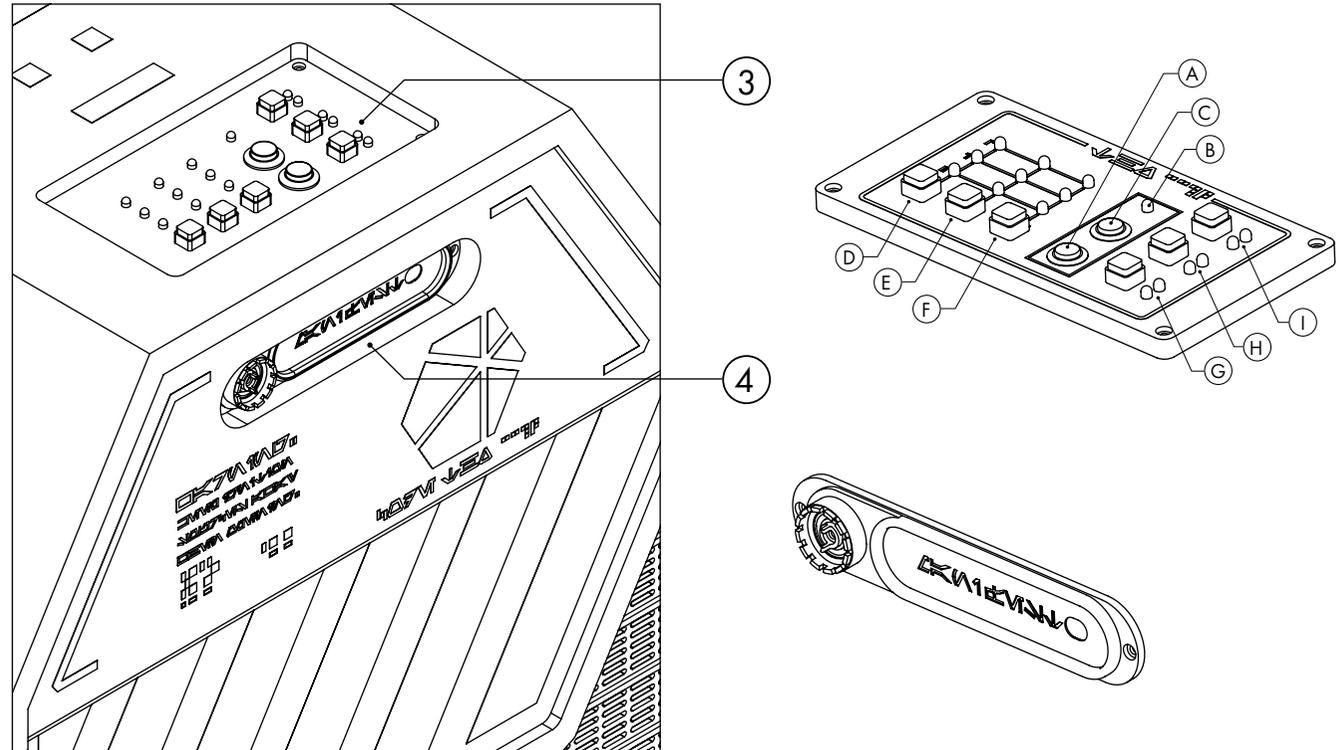

# STORAGE UNITS

- S** Straps capsule
- W** Death Star Tourbillon capsule
- K** Kyber crystal capsule
- F** Free storage

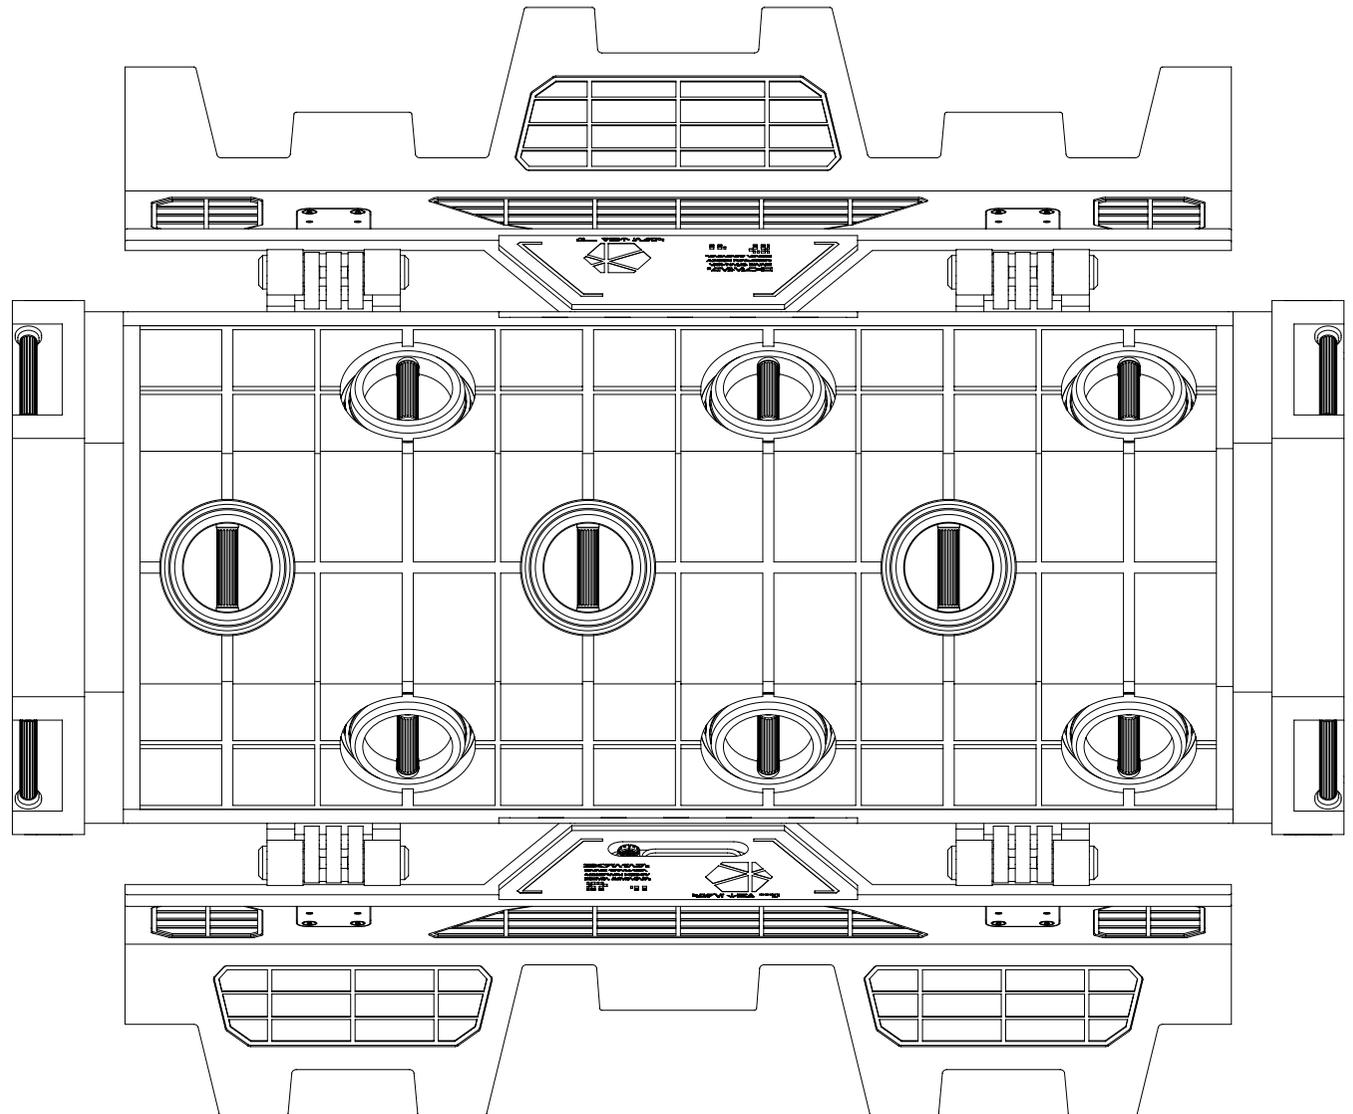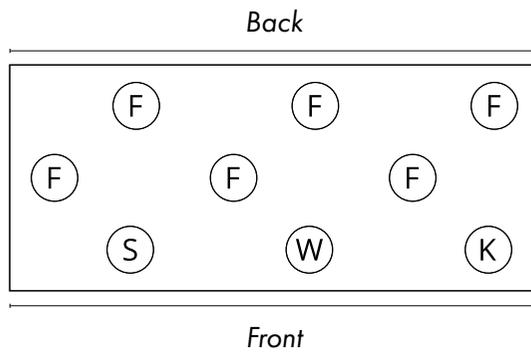

# OPENING THE CAPSULES

Pull each of the three capsules out of the container by the handle.

Once extracted, hold the capsule base firmly with one hand.

With the other hand, turn the handle located on the top of the cap anticlockwise.

Pull it out carefully.


Reverse the process to close your capsule properly.

Watch capsule: use extra caution and avoid any shock when pulling out the watch, as negligent manipulation might alter the watch or precision of the movement.

Kyber crystal capsule: to display your kyber crystal, turn the inner part of your capsule upside down (3), and put it on a plane surface.

## INDICATIONS


- 1 Handle
- 2 Base
- 3 Inner part

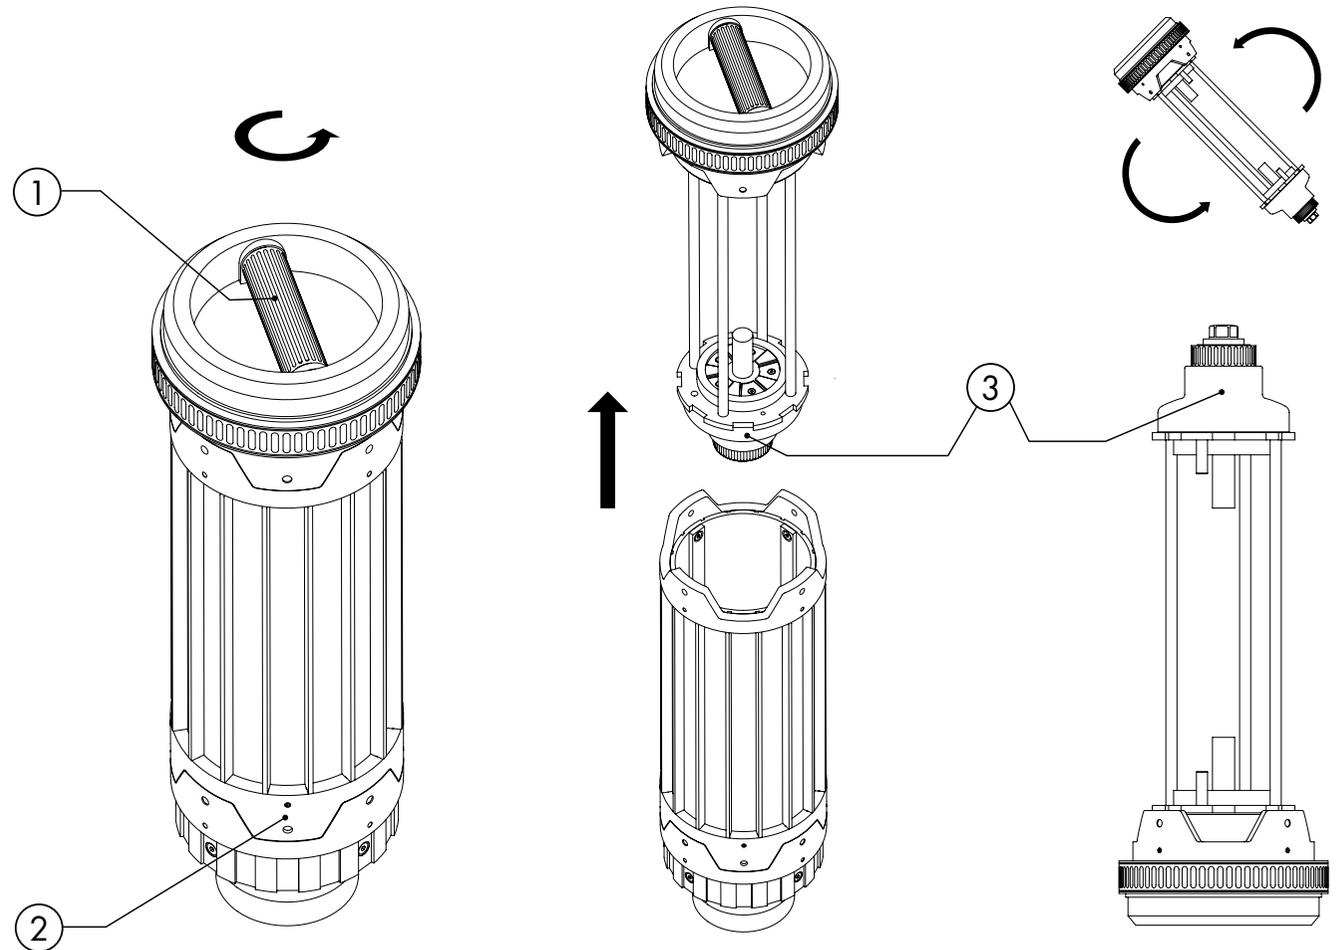

# DEATH STAR TOURBILLON OVERVIEW

## FRONT


- 1** Case
- 2** Dial
- 3** Hour hand  
*Imperial-Class Star Destroyer*
- 4** Minute hand  
*Super-Class Star Destroyer*
- 5** Tourbillon cage  
*The Death Star*
- 6** Death Star  
*Superlaser*

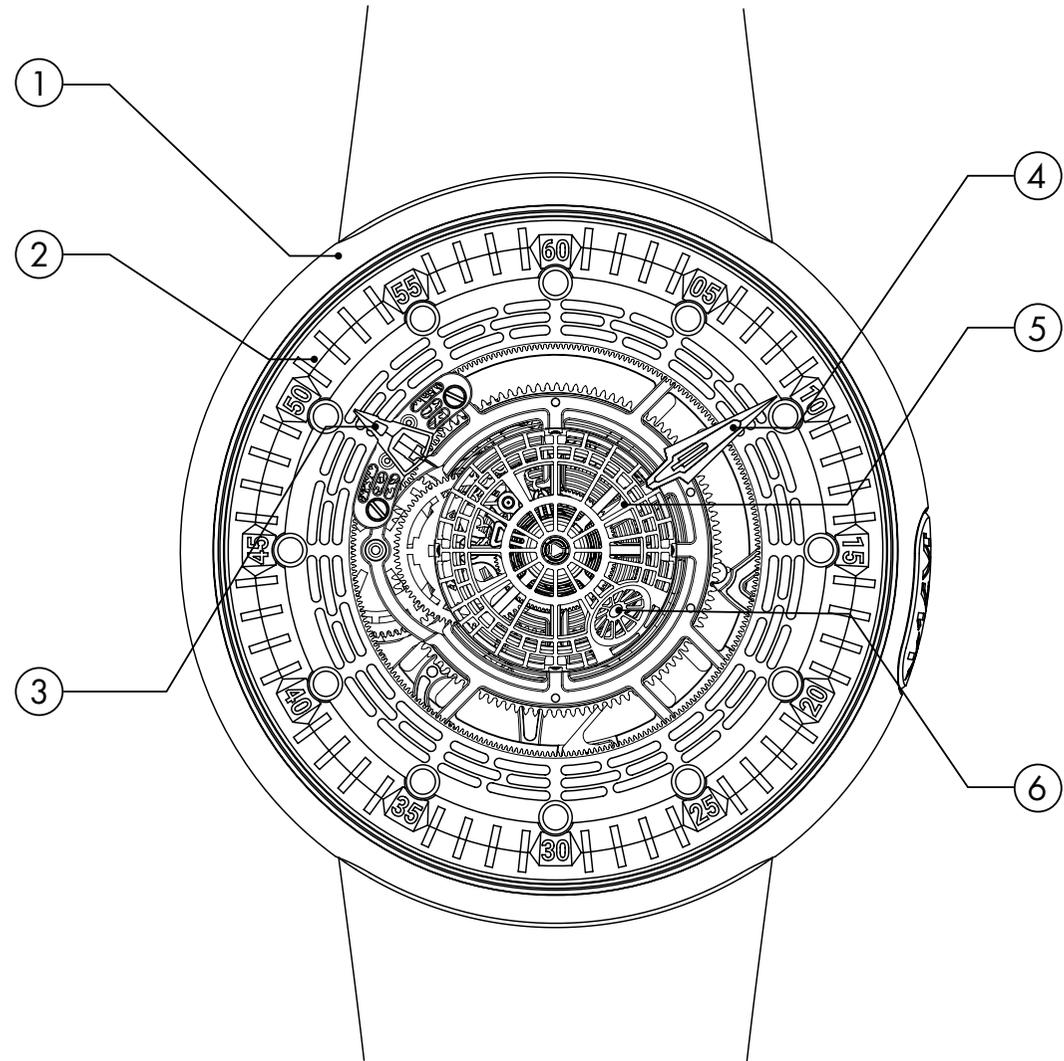

# DEATH STAR TOURBILLON OVERVIEW

## BACK

- 7** Push buttons  
Aurebesh Script: "Time Set"
- 8** D-Ring crown
- 9** Strap release push buttons  
Aurebesh Script: "Push to release"

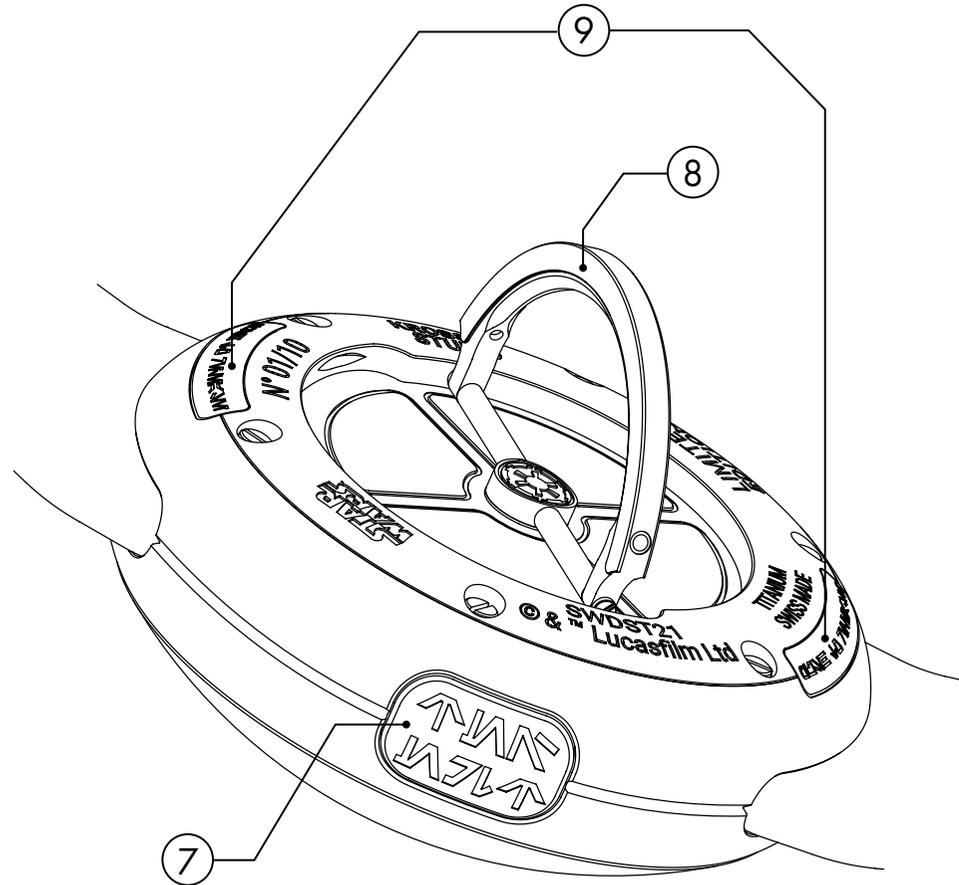


# MOVEMENT WINDING

The in-house manual-winding mechanical movement delivers a 5 day power reserve. After this period, you must wind your watch to provide the necessary energy for it to run.

In order to maintain perfect symmetry, the Death Star Tourbillon case has no traditional crown. On the case back, a D-ring crown is stowed out of sight to help maintain the timepiece's sleek, space-age styling. This mechanism enables faster winding than with a traditional crown. To wind your watch, lift the D-ring crown and turn it counterclockwise until you feel some resistance, meaning that the watch has been wound.

To fully wind your watch, 23 complete turns are needed.

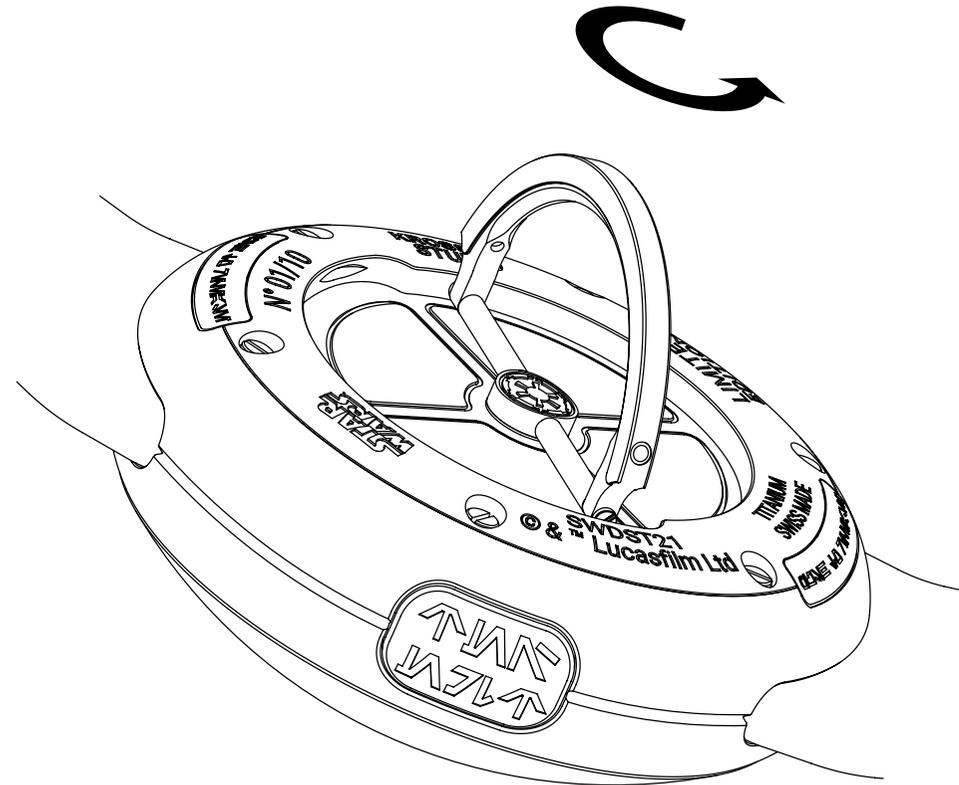


# TIME SETTING

The hours and minutes are displayed in a unique peripheral format, made possible by a planetary gear system that orbits 360° around the tourbillon.

To set the time, press the Time Set push button. Lift the D-ring crown - located on the case-back - synchronously and turn clockwise until the exact time is set. When setting the time, there may be some resistance as the watch will be wound simultaneously.

You can then gently reposition the D-ring crown back to its initial position, in the space provided for this purpose on the case-back.


Note: You might turn the D-crown counterclockwise. In this case, go back 10 minutes before the actual time. Then, turn it clockwise until adjusting the exact time. It enables the gear train to go back to its functioning position.

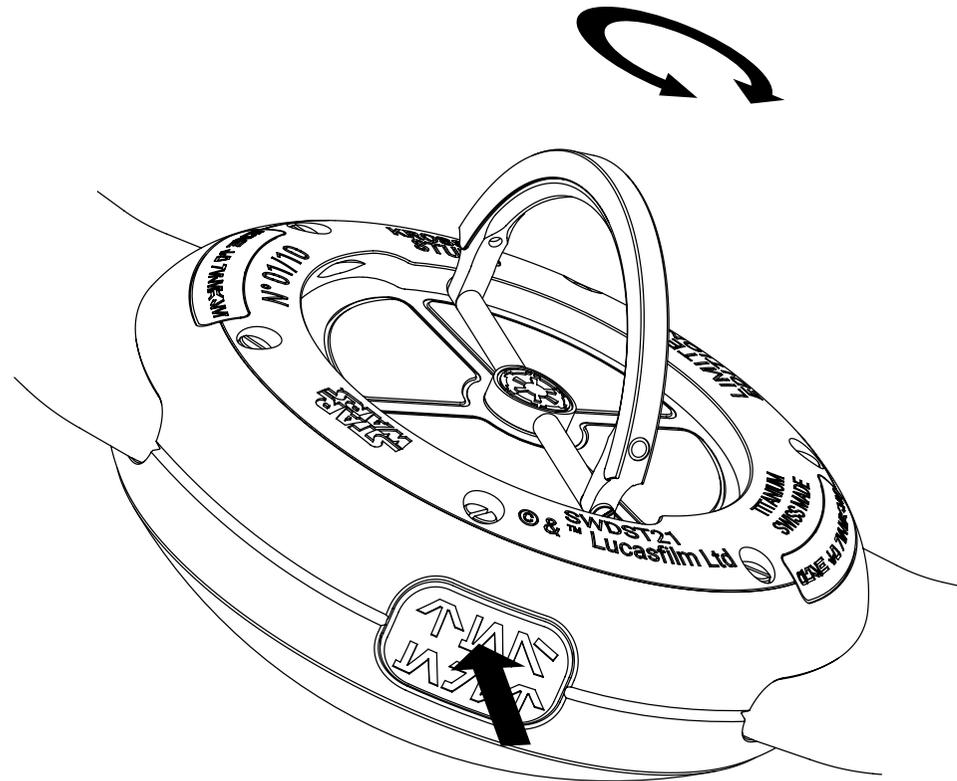

# INTERCHANGEABLE STRAPS


The Death Star Tourbillon is equipped with an interchangeable strap system, a practical feature where two quick-release buttons are hidden on the underside of the case.

Push each button to release the strap.

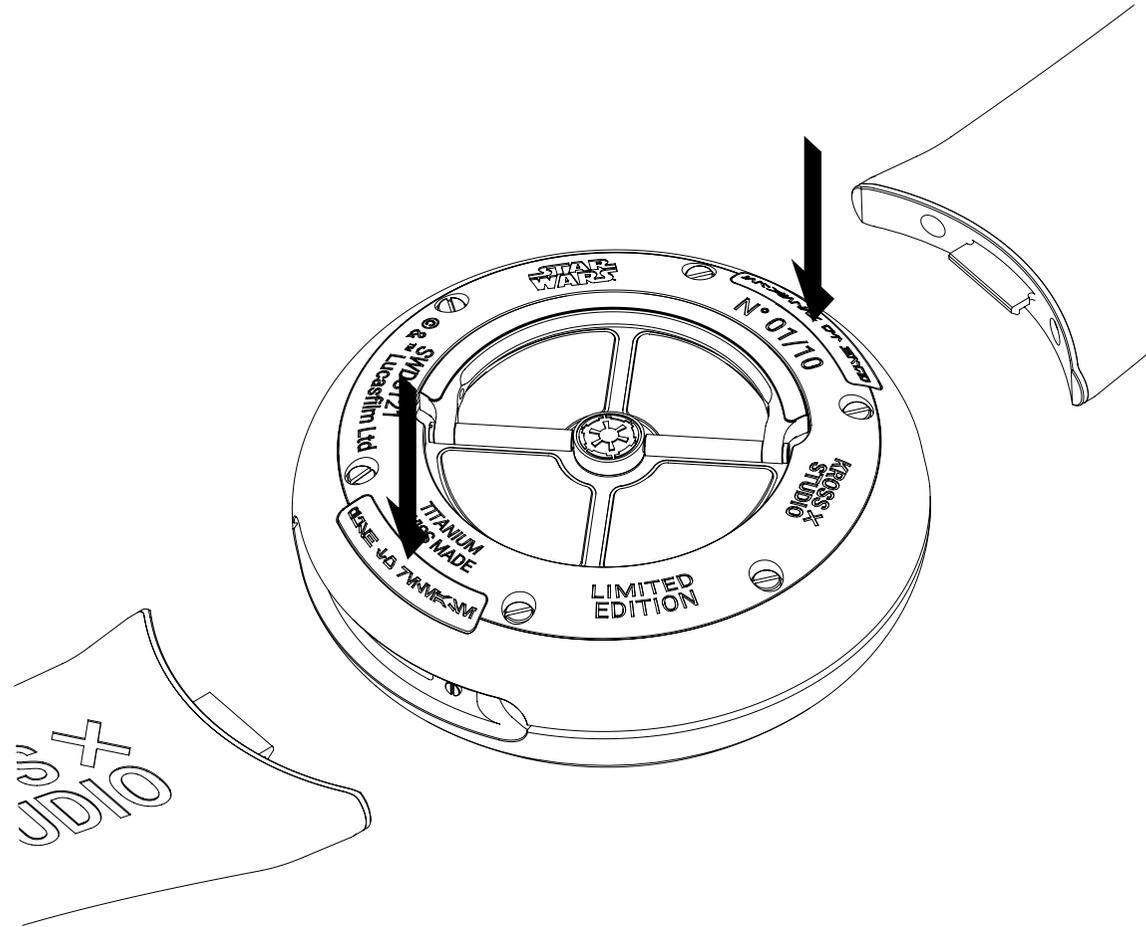

# BUCKLE OPENING

Press simultaneously the two push buttons located on the sides of the clasp to open the buckle.

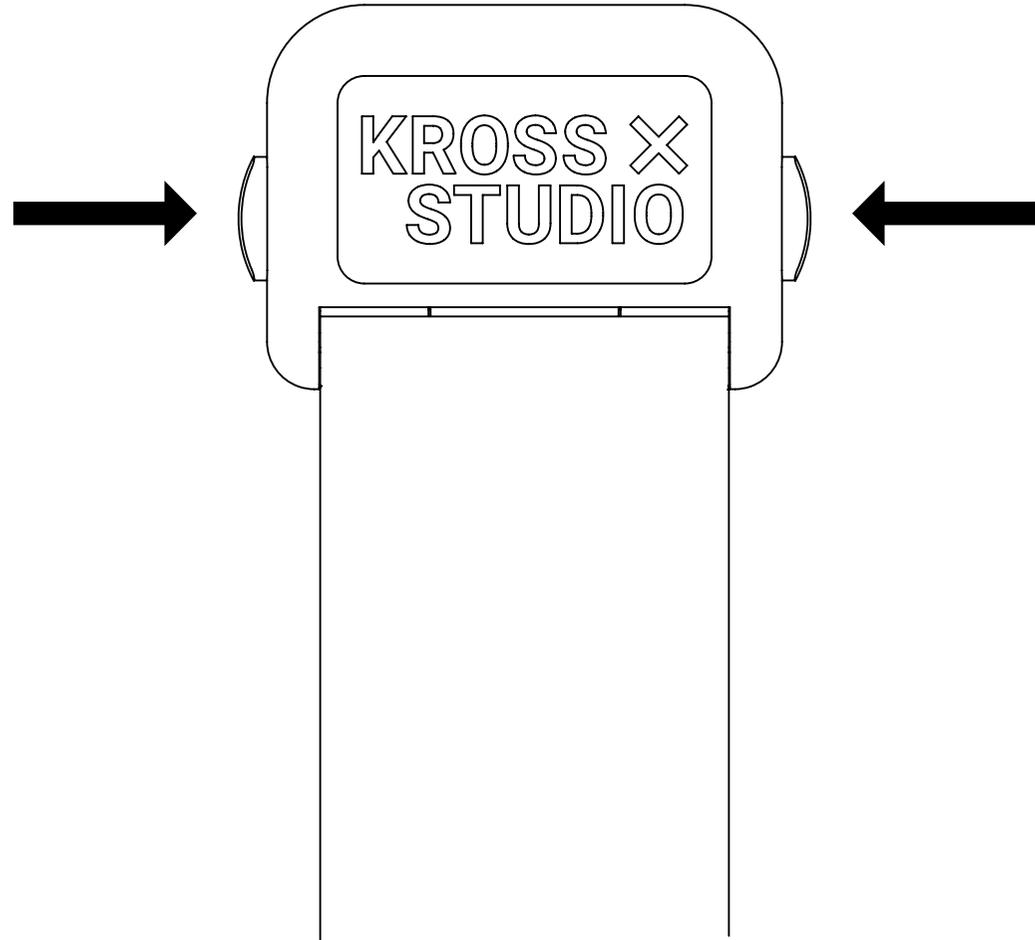


# BUCKLE RELEASE

To detach the buckle, no tools are required.

Simply pull the lever located under the clasp and it will release the strap.

To fix the buckle, start by inserting the right side of the buckle on the spring bar. Pull the lever and insert the left side.

Make sure the spring bar is securely in place by pulling few times on the strap.

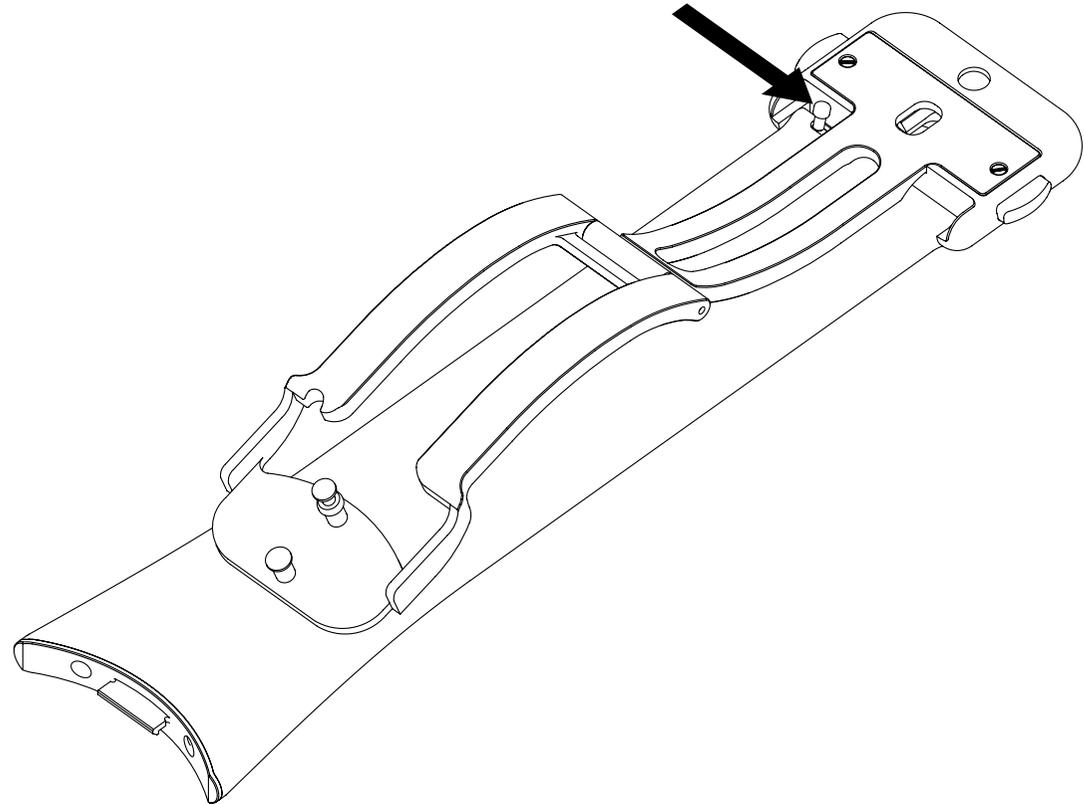

# REGULAR CARE

## REGULAR CARE OF THE CONTAINER AND THE CAPSULES

Use a smooth microfiber cloth to clean the removable capsules and the container. Gloves are recommended to prevent any risk of scratching. If needed, you may use a solvent-free cleaner to spray on the cloth. Do not spray any liquid directly on the container and capsules.

## REGULAR CARE OF THE DEATH STAR TOURBILLON

The tourbillon remains one of the main horological complications and bears the mark of the most talented watchmakers.

Caution and care are required to ensure the longevity of your watch. To handle it properly, a set of gloves and a soft microfiber cloth are provided in a box along with your Death Star Ultimate Collector Set. We strongly recommend wearing gloves every time the watch is manipulated, for winding or time setting. It will enable a better gripping and help prevent any risk of scratching.

The watch has a water resistance of 30 meters. We recommend avoiding sea water.

Clean regularly your watch by wiping down carefully with the soft microfiber cloth. If needed, you may use a solvent-free cleaner to spray on the cloth. Do not spray any liquid directly on the watch.

# TECH SPECS

## DEATH STAR TOURBILLON

**Parts**  
281

**Limited Edition**  
10 numbered pieces

Movement

**Caliber**  
KS 7'000

**Jewels**  
27

**Functions**  
Manual-winding central tourbillon

**Power reserve**  
5 days

**Parts**  
203

**Frequency**  
21'600 bph / 3 Hz

Case

**Materials**  
Grade 5 titanium

**Diameter**  
45 mm

Dome-shaped anti-reflective sapphire crystal

**Thickness**  
20 mm

**Water Resistance**  
30 m or 3 ATM

**Thickness without crystal**  
12,5 mm

Case Back

**Materials**  
Grade 5 titanium

D-ring crown

4 anti-reflective sapphire crystals

Interchangeable Straps

1. Black rubber strap embossed with the Death Star inspired pattern, black stitching, black rubber inlay
  2. Grey calf leather, grey stitching, black rubber inlay
  3. Red rubber strap, red stitching, black rubber inlay
- rubber inlay
- Grade 5 titanium deployant buckle clasp

## KYBER CRYSTAL CONTAINER

**Dimensions**

**Length**  
1200 mm

**Width**  
568 mm

**Height**  
478 mm

**Materials**

Wood, aluminium and black polymer

**Parts**  
732

## CAPSULES

**Height**  
337,5 mm

**Diameter**  
113 mm

**Material**  
Aluminum